Amber DT-two Thermostat

The DT-two is an intuitive programmable thermostat used to control your underfloor heating.

Featuring a colour screen, 7 day schedule and open door technology, it will keep your home at a comfortable temperature whilst minimising energy use.

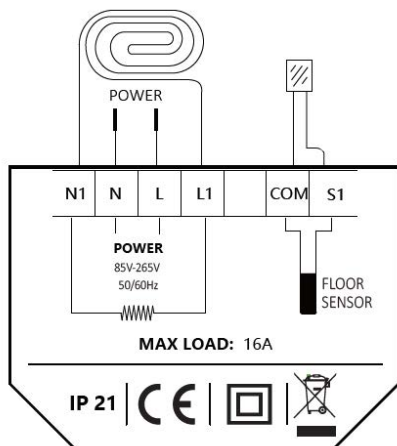08:00 Monday

20.0

Auto Mode: Event Wake

Features

- Large Colour Touch Screen Face
- 7 Day, 6 Period Programme
- Floor Temperature Limiting Function
- Sensor Offset
- Frost Protection
- Holiday Mode
- 2 Year Warranty

Technical Specifications	
Supply Voltage	85-265Vac 50/60Hz
Standby Power Consumption	< 1W
Max Load	16 Amp
IP Class	IP21
Cable Specification	2.5mm2
Housing Material	Anti-flammable PC

Wiring Diagram

POWER

| N1 | N | L | L1 | COM | S1 |

POWER
85V-265V
50/60Hz

FLOOR SENSOR

MAX LOAD: 16A

IP 21

Step 1: Loosen fixing screw located in the bottom of the thermostat to get the front panel.

Step 2: Connect the thermostat according to the Wiring Instruction.

Step 3: Insert the back panel into wall box with provided screws.

Step 4: Align top part of front panel and back panel to fit these two parts. Then fix them with screw.

Amber
Underfloor Heating

0800 056 0494
sales@amberufh.co.uk
www.amberufh.co.uk